

Floor Jack or Lift

Tension & Cover)

**Tire Pressure Gauge** 

1/2" Wrench x2 (Tine Hardware) 7/16" Wrench x2 (Belt Cover)

9/16" Wrench x 2 ( Chain Idler adjustment, Belt

**Tape Measure** 

**Tools Used** 

## **XT10 Daily Preventative Maintenance Checklist**

This is just a general guide, always refer to your manual for detailed instructions

#### **Daily Cleaning**

 $\square$ 

- Clear the tines, chains, and operators' platform of any dirt or 0 debris. Avoid using high pressure wash
- Engine Oil & Hydraulic Oil Check Daily
  - Engine 10W-30 0
  - 0 Hydraulic Reservoir - 20W-50 Motor Oil
  - Inspect Air Cleaner Assembly for Excess Buildup
    - TURFCO Part #670612 0
- **Check Tire Pressure** 
  - Rear 28 PSI 0

### Inspect Hardware

Inspect tines, tensioners, handles, & depth control hardware for 0 tension. Tighten as necessary

#### Inspect Chains

- Inspect chains for lubrication. Apply a light coating of dry chain 0 lube as necessary
- Check length of chain for tension. There should be  $\frac{1}{2}$ "-3/4" 0 deflection. Adjust Idler sprocket if needed (Figure 2)

#### Inspect Belt

- 0 inspect for any uneven wear, damage, debris & tension.
- If tension is needed remove V-belt cover and turn adjuster 0 screw to compress spring to a measure of 2-1/2'' - 2-5/8''(Figure 3)

	Mon	Tues	Wed	Thurs	Fri	Sat	Sun
Inspection							
Completed							

### Completed by:

Serial Number

Name

Signature

Date

FIGURE 7

# TINE WHEEL REAR WHEEL SPROCKET (INNER CHAIN) SPROCKET (OUTER CHAIN) Figure 2: Chain Idler Sprockets IDLER PULLEY TENSION 2-1/2" TO 2-TENSI ENGINE 0

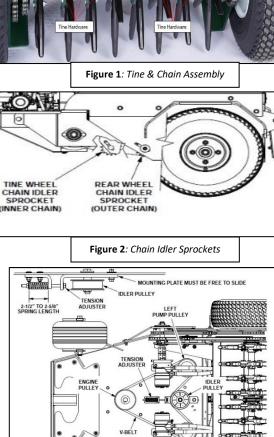


Figure 3: Belt Assembly